

Master Flash® Solar Multi Port MR



Use measuring tool to check the diameter of the roof penetration.
If necessary, use the lines clearly shown on the flashing to trim an opening 10 – 20% smaller than pipe diameter.




Slide the Master Flash® down the pipe, using a non-petroleum-based lubricant to ease installation.



Press Master Flash® down, bending it to conform to roof profile or irregularities. A blunt tool will help to form flashing to tight roof angles.



Apply sealant between the base of the flashing and the roof.

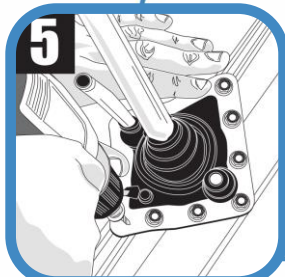

Fix the flashing to the surface using self-drilling screws assembled with washers. The spacing between the screws should not exceed 38 mm (1,5 inch.).